

Automatic Banknote Bundler

OPERATION MANUAL



CONTENTS

1. 0 Brief.....	1
1.1 Foreword.....	1
1.2 Features.....	1
1.3 Technical Specifications.....	1
1.4 Advantages.....	2
2.0 Operation.....	2
2.1 Appearance.....	2
2.2 Before Using.....	2
2.3 Operation.....	3
2.4 Paper Changing.....	4
3.0 Troubleshooting.....	4
3.1 Paper Jam.....	4
3.2 Binding Failure.....	4
4.0 Precaution.....	5
5.0 Packing List.....	5

1. 0 Brief

1.1 Foreword

Thank you very much for your purchase of our newly designed Automatic Banknote Bundler which is specialized with its simple and elegant appearance. With the deep-going reform of the finance industry, high quality service is greatly demanded. This Automatic Banknote Bundler is a necessity for realizing financial equipment automation.

This Automatic Banknote Bundler is made up of durable material which is an excellent combination of high quality and competitive price. Moreover, it is low noise, low consumption and high efficiency. It can not only fulfill the demand of financial industry, but also adapt to the changing of industry.

1.2 Features

- Micro computer controlled, simply operated
- Compact and elegant design
- Fit for all kinds banknotes, cheque and securities
- Adjustable binding position
- Automatic thermal binding, decent and firm

1.3 Technical Specifications

- Ambient Temperature: 0°C-40°C
- Ambient Humidity: 30%-90%
- Power: AC175V-250V 50Hz±2Hz
- Max. Power Consumption: 40W
- Standby Consumption: ≤12W
- Binding Speed: ≤1.5 seconds
- Preheating Time: 30 Seconds
- Working Hour: 24 Hours
- Adaptable Binding Paper: 2cm x 100m x Φ15.6cm
- Adaptable Binding Object: 50mm-100mm in wide banknote(100 pieces), cheque, securities etc.
- Adjustable range of binding paper: 45mm-83mm
- Unit Size: 245mm(L) x 180mm(W) x 240mm(H)
- Net Weight: 5kg

•Before using, please make sure there is paper inside.

•Paper fixing instruction:

Open the upper cover and then follow the diagram and the below instruction to fix the paper:

- a. Put a paper tape with the paper leading head lay clockwise on the paper bracket.
- b. Pull the paper leading head from the right side of the tape. Pull it through the paper pressing wheel-1. And then, lead the paper in the middle of the Paper leading shaft-1 and Paper pressing wheel-1.
- c. Make the inner side of the paper tape face to ourselves (Note: the inner side of the paper is sticky while the outer side is not) . And then turn it clockwise 90 degrees. After that pull it through the paper leading wheel and lay it under Paper leading shaft-2. At last, insert the paper head into the paper entrance and press the Paper In button to let in the paper.

Note:

1. When the paper passing through the Paper Pressing Wheel-2, the sticky side is always face adown. Do not make the paper upside-down, otherwise, the machine can not work properly.
2. The leading end of the paper roll should be cut evenly for easy paper insertion. The Paper In button can only be used for once every time, otherwise, paper will jammed inside.
3. Please press Paper Out button when paper jammed, and then try again.

2.3 Operation

•After switch on the machine, the red light will be lit up for 30 seconds and then change into green which means the machine is ready for operation.

•Binding position adjustment: the distance from the center of the paper tape and the paper leading end should be 45-85mm. Adjust the binding position adjustment screw clockwise or anticlockwise.

•Hold a bundle of banknote(100pcs), cheques or securities by your right hand and bend it a little bit. Then horizontally push the bundle into the banknote entrance and touch the binding button inside to start.

•The tightness depends on the operation. The bender the bundle, the tighter.

2.4 Paper Changing

- Stop operating when the binding paper is run out.
- Open the upper cover, press the Paper Out button to make the remaining paper go out.
- Take out the tape core.
- Follow the diagram on the upper cover to fix the paper.
- Use the required paper type.

3.0 Troubleshooting

3.1 Paper Jam

- Press the Paper Out button to make the jammed paper go out. If failed, then press the button and pull it out by hand.
- Check if any remaining paper in the paper leading way.
- Lead the remaining paper to the bottom of the way and clear the remaining from the remaining from the machine bottom.
- Try again to follow the diagram to fix the paper.

3.2 Binding Failure

- Sometimes it is because of defective paper when binding failure occurs(e.g. The glue on the paper is too little). Please change another paper roll.
- Check whether the paper is upside-down.
It is suggested to use the paper roll manufactured by us.

4.0 Precaution

- Machine should be well connected to good groundwire.
- Please unplug the machine if do not use for a long time.
- Do not put your hand into the machine when it is in standby state to avoid any injury.
- After replacing the paper, if there is any unusual smell, this means the paper is wrongly fixed, then, please consult the technician.

5.0 Packing List

Automatic Banknote Bundler	1 unit
Paper Roll	1 piece
Power Cord	1 piece
Warranty Card	1 copy
User Manual	1 copy